
## **Thermaltake**

Pacific CL360

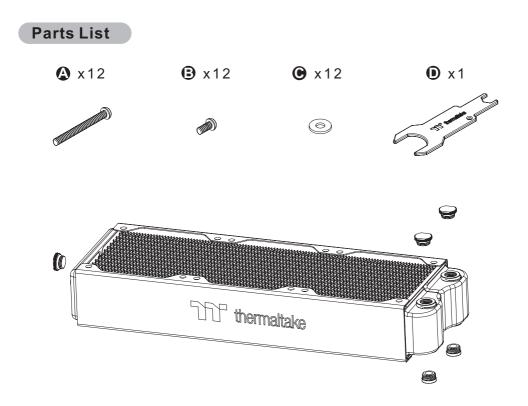

## **CAUTION**

## Thermaltake recommends the following steps to be taken before using the Pacific series radiators and water blocks

- 1. To ensure a clean loop, flush and rinse your radiators and water blocks with distilled water prior to use.
- 2. Do not use tap water or distilled water as your coolant, it may harm your loop and reduce performance.
- 3. It is strongly recommended to use market proven pre-mix coolant, such as Thermaltake Coolant 1000. It offers great performance while protecting the entire liquid loop from corrosion.
- 4. Before storing your water cooling components, please clean, rinse and dry. This will ensure a longer lifespan for your components.



© 2018 Thermaltake Technology Co., Ltd. All Rights Reserved. www.thermaltake.com